

PART NO.


PAN01

DESCRIPTION


CPD PANEL CLIP

Thank you for purchasing our product!
Please read these instructions and follow them step by step.*


TOOL REQUIRED: Tape measure, pencil, Drill (cordless if near the water), 3/16" drill bit, 7/16" wrench.

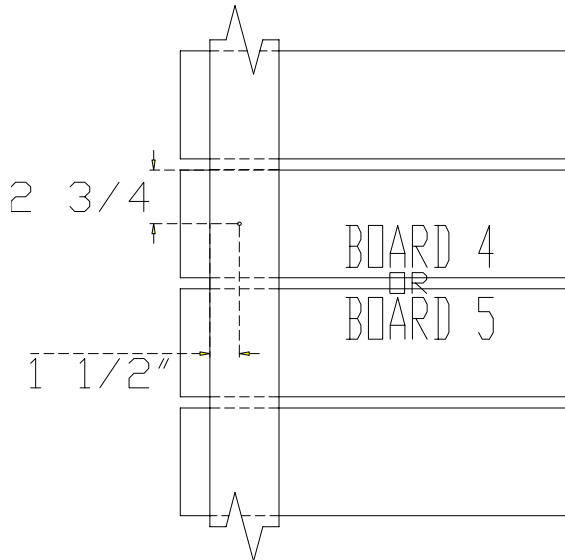

Step 1. Lay the cedar panel upside down. Mark the location of the hole on the fourth or fifth board of the panel, measure in 1 1/2" in on the backer and 2 3/4" down on the board selected (see dia.). With a 3/16" drill bit, drill hole on mark approximately 1" deep (**USE CAUTION NOT TO DRILL COMPLETELY THROUGH CEDAR BOARD!**).

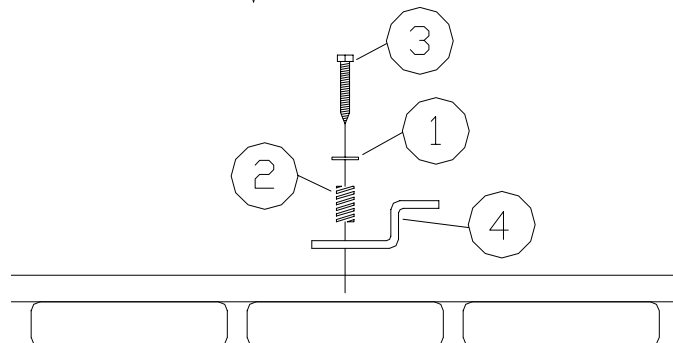

Step 2. Place the 1/4" washer (Ref. No. 1), and coil spring (Ref. No. 2) onto the lag screw (Ref. No. 3). Fasten panel clip bracket (Ref. No. 4) to backer with lag screw. Tighten until spring is compressed completely and loosen about 3/4 of a turn.

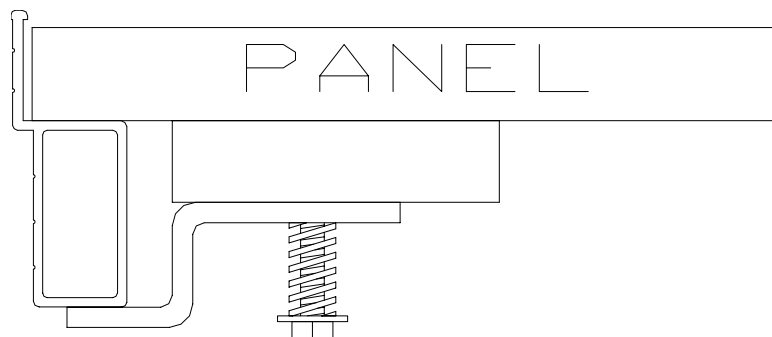

Step 3. Turn panel clip bracket so that it is parallel with panel. Place panel on dock and turn the panel clip bracket so that the lip is under the top rail of the dock section.

REF. #	PART #	DESCRIPTION	QUANTITY
1	5075	1/4"	2
2	5021	COIL SPRING	2
3	5216	LAG SCREW	2
4	1346	CPD PANEL CLIP	2