

PORTA-DOCK, INC.
AP80 – DS 6' X L8 PLATFORM APD
AW80 – DS 6' X L8 PLATFORM CPD


Thank you for purchasing our product!
***Please read these instructions and follow them step by step.**

If you are assembling a 6 X 8 platform dock please use this instructions in place of the step 1 instruction in the main packet.

Step 1B. (6 X 12 platform only)

Bolt the two dock sections together as shown with 1/2" x 1 1/4" bolts, washers and nuts (REF. # 20, 36 & 3). **Note: the docks are assembled so the pockets that are welded into the frames are to the outside of the assembly.**

Bolt the dock connector bracket (REF. # 9) to the lower side holes of the angles with 1/2" x 1 1/4" bolts, washers, and nuts. Do not install a dock connector bracket where you will connect an add on section later. Bolt the winches on as described in step 1A.

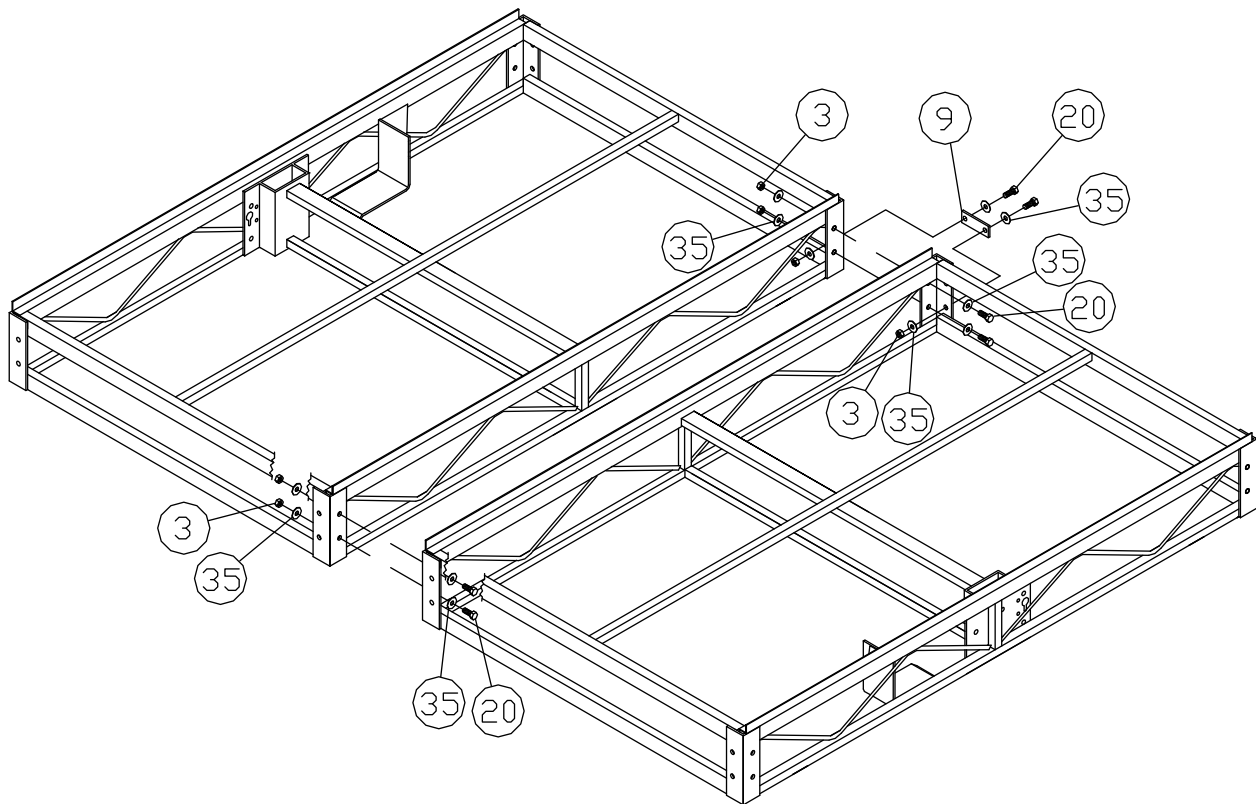

FRAMES

<u>PART#</u>	<u>DESCRIPTION</u>	<u>APD</u>	<u>CPD</u>	<u>AA</u>
MS01	4' X 6'5" L PLATFORM SECT.	1	1	-

PANELS

<u>PART#</u>	<u>DESCRIPTION</u>	<u>APD</u>	<u>CPD</u>	<u>AA</u>
B112 (B)	4' X 3' ALUM PL L RIGHT CUTOUT	1	-	-
B111 (B)	4' X 3' ALUM PL L LEFT CUTOUT	1	-	-
BB47	4' X 4' CEDAR PL VLM LT CUTOUT	-	1	-
BB46	4' X 4' CEDAR PL VLM RT CUTOUT	-	1	-
BB8	2.5' X 4' STRAIGHT	-	2	-