

SPINNER KNOB ASSEMBLY # 4504


Thank you for purchasing our product.
Please read and follow these directions step by step.

Step 1. Place the spinner knob (**REF. # 1**) on a lift wheel spoke. Place the backing plate (**REF # 2**) on the back of the spoke.

Step 2. Insert a bolt (**REF. # 3**) through one side adding a stabilizer finger (**REF. # 4**) to the backside. Finger tighten.

Step 3. Repeat procedure on other end. Tighten both nuts. Spinner knob is now ready to use.

REF. #	PART #	DESCRIPTION	QTY
1	4515	SPINNER KNOB	1
2	5107	BACKER PLATE	1
3	5151	1/4"X 1" BOLT	2
4	5106	STABILIZER FINGER	2
5	5055	1/4" NUT	2
6	5110	7/16" X 2" BOLT	1
7	5105	SPINNER KNOB PLATE	1
8	5070	3/8" WASHER	1

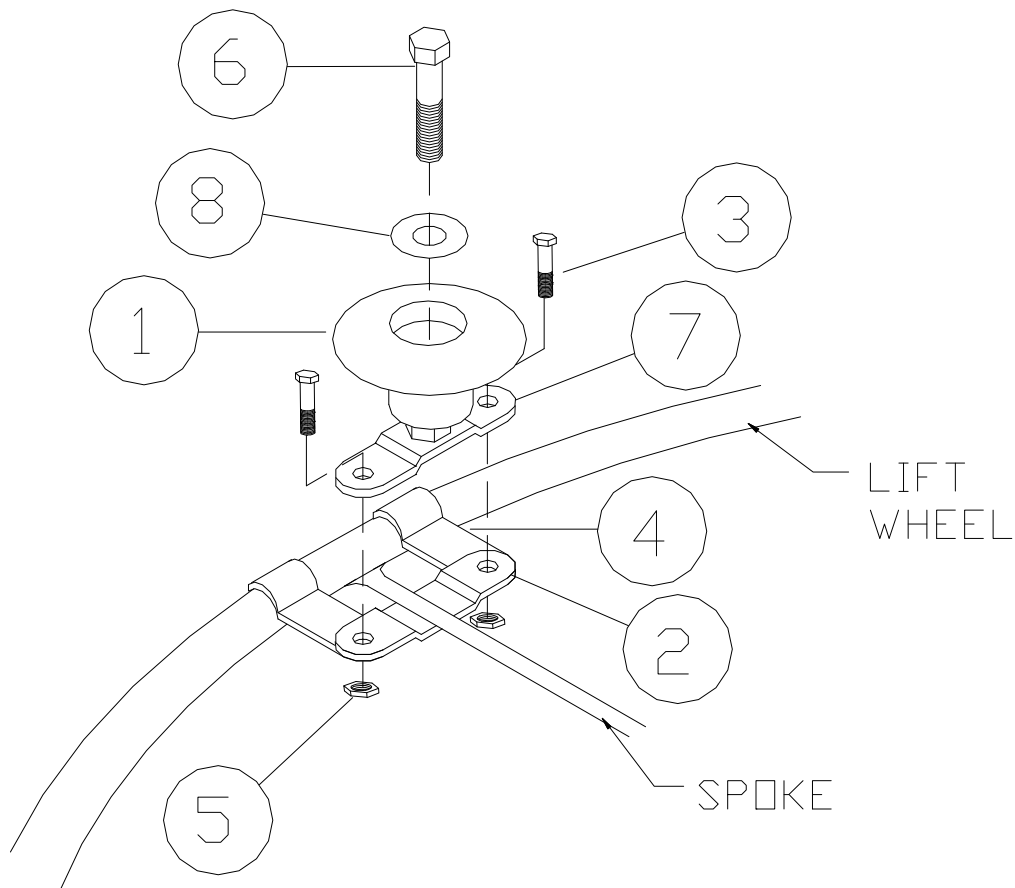

Porta-Dock, Inc.